


CONFIGURAZIONE SMTP PER LA POSTA ELETTRONICA

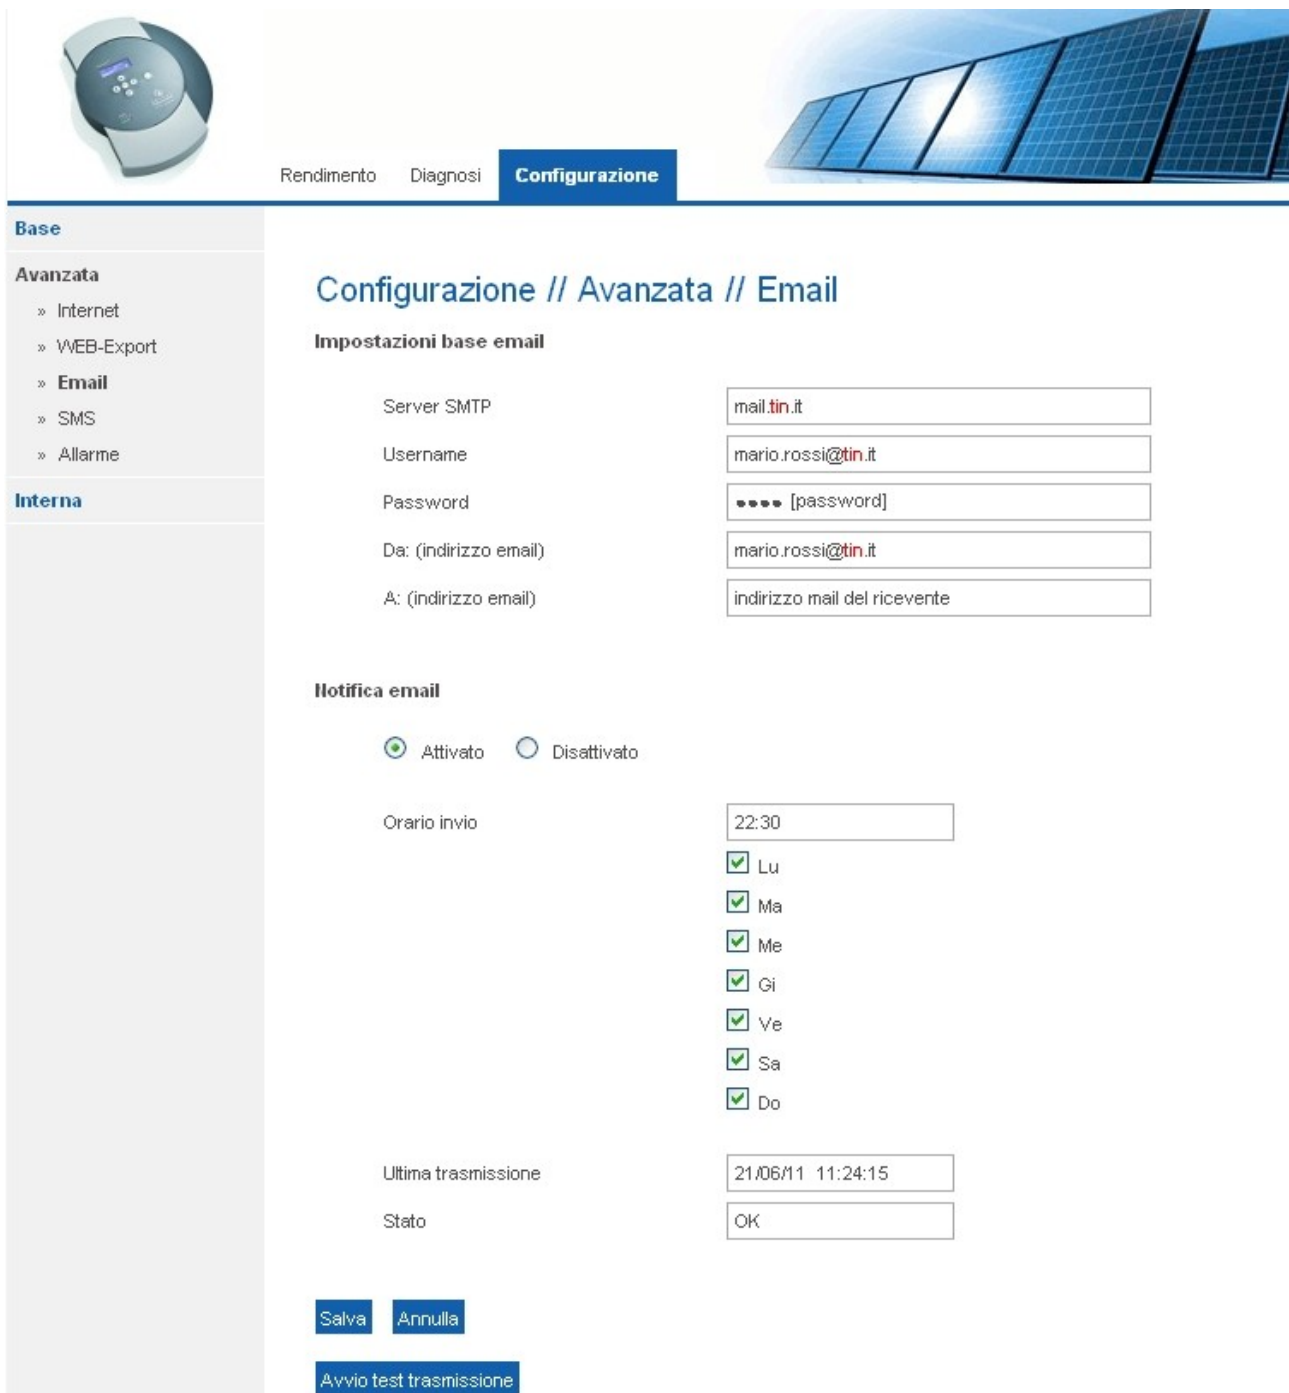

The image shows the SolarLog Web configuration interface. At the top, there is a navigation bar with 'Rendimento', 'Diagnosi', and 'Configurazione' (highlighted). Below this is a sidebar with 'Base' and 'Avanzata' sections. The 'Avanzata' section is expanded to show 'Email' settings. The main content area is titled 'Configurazione // Avanzata // Email' and contains the following fields:

- Impostazioni base email:**
 - Server SMTP: mail.tin.it
 - Username: mario.rossi@tin.it
 - Password: •••• [password]
 - Da: (indirizzo email): mario.rossi@tin.it
 - A: (indirizzo email): indirizzo mail del ricevente
- Notifica email:**
 - Attivato (selected) / Disattivato
 - Orario invio: 22:30
 - Days: Lu, Ma, Me, Gi, Ve, Sa, Do (all checked)
- Ultima trasmissione: 21/06/11 11:24:15
- Stato: OK

Buttons at the bottom: Salva, Annulla, and Avvio test trasmissione.

Se è stata fatta la registrazione nel portale SolarLog Web “**Classic 2nd Edition**” seguire le istruzioni che vengono fornite via mail

Se la registrazione è fatta dal portale SolarLog “**Commercial**” oppure non c’è registrazione seguire le istruzioni in alto.

Fare il test di trasmissione.

Attenzione: non sono supportati provider senza autenticazione, è necessario avere login e password.